



\*\*\*NOTE: A SEPARATE CONNECTION MUST BE MADE FROM THE BATTERY TO THE NEGATIVE LUG IN THE MAIN CONTROL BOX.  
SEE 4.8 ELECTRICAL NOISE PAGE 4-4

THIS WIRING DIAGRAM APPLIES TO VERSION 12 BOARD ONLY AND IS NOT TYPICAL OF EARLIER VERSIONS